

Protect your home from wind-driven rain


You will need:

Duct tape and thick heavy duty plastic film.


Steps:

1. Ensure windows are securely closed and locked
2. Check the indoor sides of the window frames are clean, dry, and free of dust and grease
3. Pre-cut plastic film to 400mm in height and 10 to 20mm less than the window width

Allow for 5 to 10mm of the window frame to be exposed

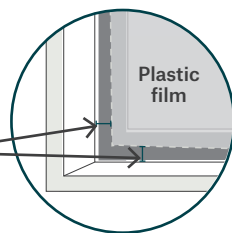

4. Place plastic over the bottom of the window frame (inside)
5. Secure the plastic film in place with duct tape covering the exposed window frame and plastic.

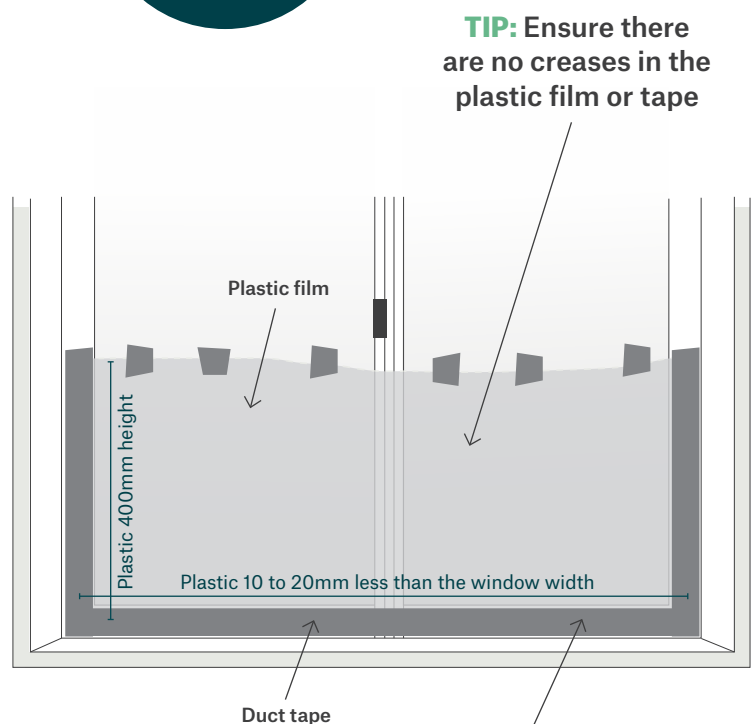

70% of cyclone-related claims involve water damage*

Water damage ranged from 2% to 60% of total claim cost*

Keep safe!
Stay clear of windows during a cyclone

TIP: Keep enough room for duct tape to overlap the film and the window frame

*James Cook University's Cyclone Testing Station analysis of claims from Tropical Cyclone Debbie and Marcia 2018.